

HOME



HEAT SYSTEM

HEATER
CONTROLLER
-
VERTICAL



TEMPERATURE
SENSOR/
REMOTE
CONTROLLER




GUIDE & USER MANUAL


HEATER CONTROLLER H+ WiFi | TEMPERATURE SENSOR



SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above abath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of seller




Mników 322, 32-084 Morawica, Poland
Tel/fax: +48 12 656 44 91

MADE IN EU


Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.

USER MANUAL: Heating element + Heater controller (vertical) H+


1 Kit content

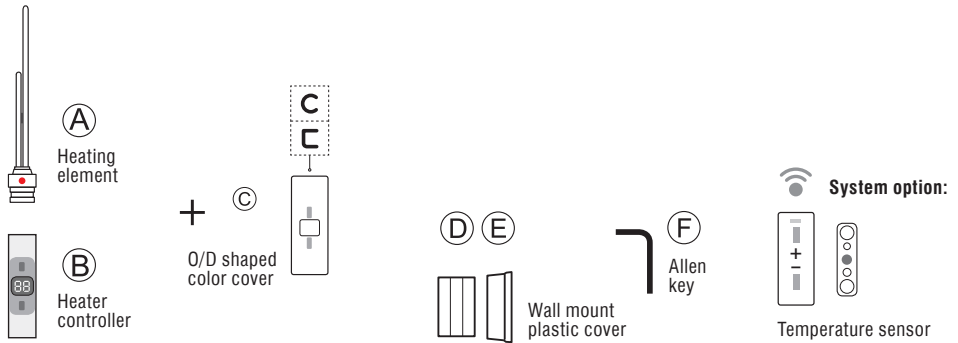

2 Preparing the temperature sensor

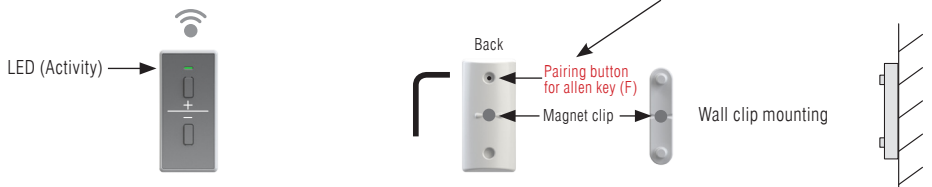

3 Locate suitable place to mount temperature sensor

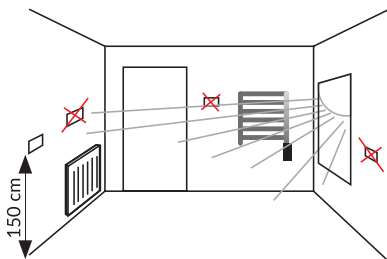


Do not place the temperature sensor:


- over the radiators
- next to doors
- in sunny places

USER MANUAL: Heating element + Heater controller (vertical) H+


Mounting in radiators

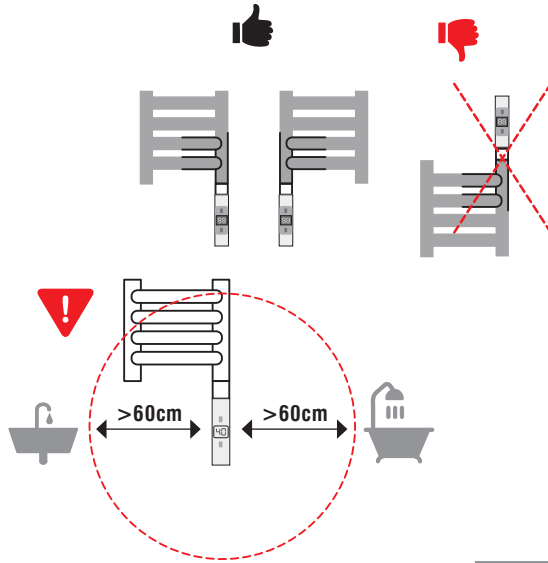


Installation options: central heating system

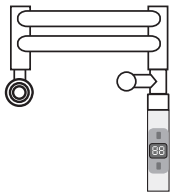


T-piece installed with lockshield valve

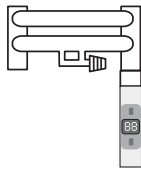


central connection

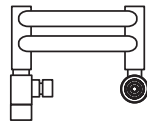

T-piece connection with lockshield valve

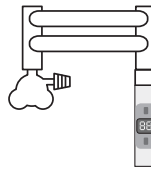

one-pipe valve connection

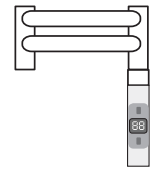


Installation options: electric radiator


Installation details



1

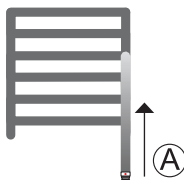

2

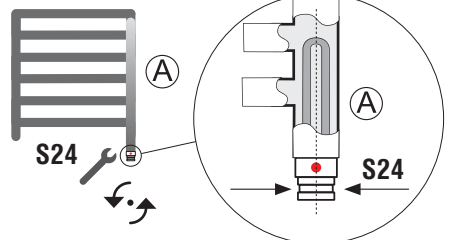


Line up dot at front

Do not play in yet


[4]




3

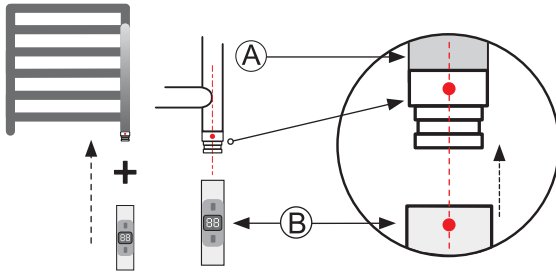


4

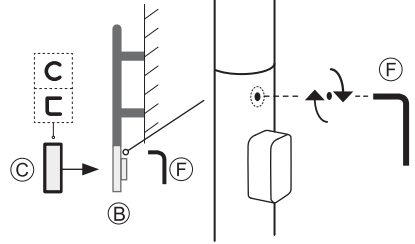


Electric radiators

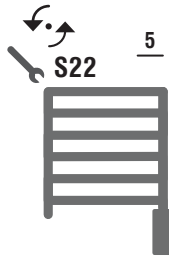

5

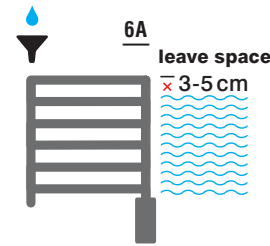


6A

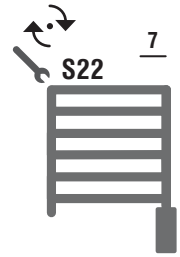

7


Central heating system

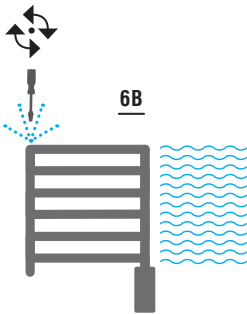

6B

Finishing


Element (D) must be cut the correct length

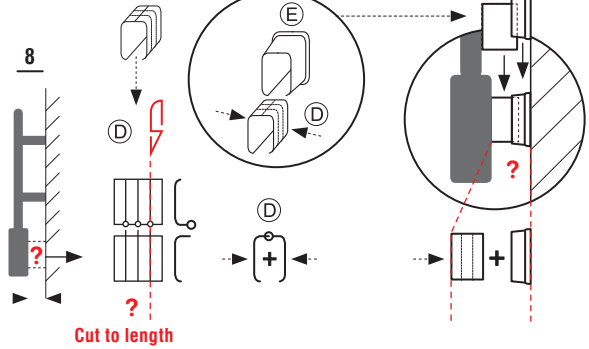

Cut to length




9A Connection with a coiled cable and a plug

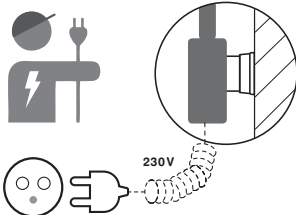

230V

9A Hard wire connection

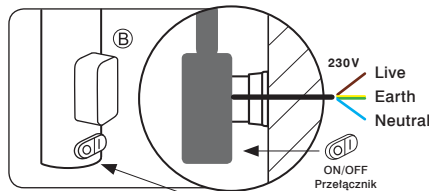

10 After electric connection, turn on the switch (concern only hard wire connection)



For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm from the main supply

1 Heater controller



← Heater controller display

When the heater is connected to the mains properly, the red light will flash on the controller display

2 The heater is ready for WiFi configuration

3 Go to supla.org and create a free supla account and follow the attached instructions.



DOWNLOAD THE APP

SUPLA.ORG



System requirements ANDROID 3.1/IOS 8.2 or the latest version

**Install the application on your devices.
The app will guide you through the individual installation steps.**



ATTENTION: Signalling improper installation or improper use:

- E1 Lack of water (or wrong choice of heating element to the heater)
- E2 Damaged heating element (or no power circuit)
- E3 No communication to the remote controller if paired




DO NOT DISCONNECT! controller from heating element, when connected to the power supply

ATTENTION:

The temperature sensor can be used as a remote controller instead of your Smartphone

1

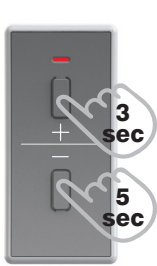

Run the heater controller via remote controller

Hold upper button for 3 seconds


Switch off the controller via remote controller

Hold lower button for 5 seconds

40°C

Standard heating temperature

2

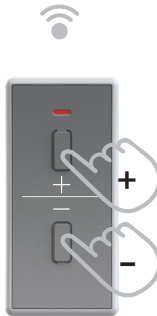

10°C - 65°C*

Select temperature

3

TURBO mode activation



TURBO mode activation - max heating temperature

Hold button for 3 seconds



b1-b2-b3

Max heating temperature, selection for 1/2/3 hours

b0

Off selection

USER MANUAL:

NEW TEMPERATURE SENSOR/REMOTE CONTROLLER PAIRING

When you buy a new heating element with a remote controller it will already be paired. You do not need to pair it again.

In case you purchase a new temperature sensor/remote controller – you need to pair it:

Prepare remote controller + allen key for use

