

A short guide for using the SUPLA App.

Once the device has been successfully configured the added heater will appear on the **main screen** of the Application.

The green dot on the right side shows that the App. can control the heater.



With your finger, slide the selected heater to the left and the main settings screen will open.

The main settings



The first temperature (19.20°) - is measured with the remote / temp. sensor (H+R). This is the actual room temperature. The second (12°) is the temperature set for the room.

Touching the buttons listed below it makes possible to change :


- + button - increase the temperature setting for the room
- button - decrease the temperature setting for the room
- ON / OFF** button - Operating or standby mode of the heater
- MANUAL** - standard operating with + / - buttons on the right side of the screen
- ECO** - decreasing the temperature preset in MANUAL mode by up to 5 deg.
- TURBO** - sets the heater to the max. heating temperature. Selection for 1 / 2 / 3 hours
- AUTO** - operating under **weekly/daily** program – the schedule is opened by the “clock” button on the upper bar. (described in the next pages) In the AUTO mode “Pd” is displayed on the heater controller .
-  - opens the schedule for AUTO mode (to view or change the settings)
-  - opens the menu of temperature settings

Touching  icon on the upper bar switches over from any screen to the main screen.


AUTO mode



MANUAL mode

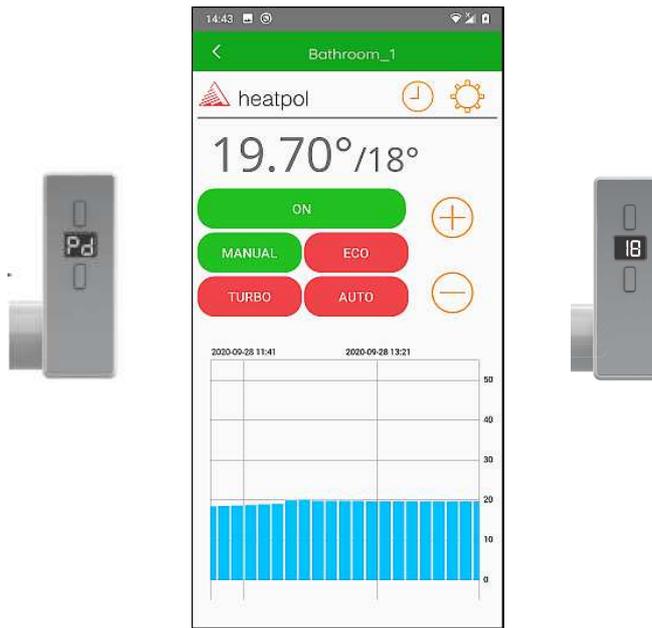

Touching  opens the menu of temperature settings, which allows to set :

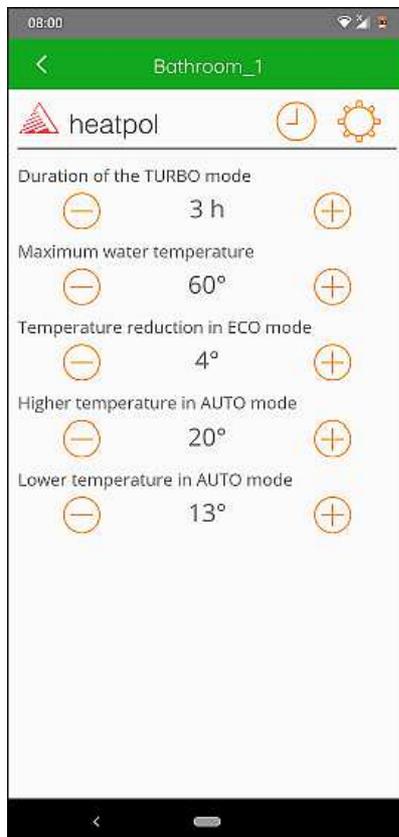

Change the duration of TURBO mode (1 / 2 / 3 hours)

The max. water temperature of the radiator
(from 30 to 70 deg. C)

Temperature reduction in ECO mode (from 1 to 5 deg.)
(Concerns the temperatures preset for MANUAL operating)

The “Higher” temperature preset for AUTO mode
(from 10 to 30 deg. C)

The ”Lower” temperature preset for AUTO mode
(from 10 to 30 deg. C)

NOTICE: the “Lower” temperature must be at least 1 degree below the “Higher” one.

Touching  again switches over to the main settings screen.

Touching  opens the schedule of AUTO mode.

An example of the schedule of AUTO mode (factory settings)



The schedule can be changed by shifting with ones finger over the screen.

The values of the temperatures are shown on the bottom of the screen. (preset in the temperature settings menu – the previous page)

Touching  again switches over to the main settings screen.

Troubleshooting :

If a heater in the App. is shown as disconnected – the red dot by the heater on the main screen (please look at the first page) - restart the corresponding WiFi router. It happens sometimes whilst using popular (usually low quality) routers.

Please assure that the router has enough numbers of channels for new WiFi devices.

If so, please switch OFF the router for a few minutes and then switch it ON again.

The lost heater should appear as connected again.

The lost communication has no influence on heater's operating. The heater itself will work all the time under previously set program.

HEAT-POL
10.2020_v1